



R-Control SIP infill below window openings, install prior to headers.

NOTE: Diagram represents headers in a wall assembly. Refer to detail SIP-112a. Minimum dimensions are not required between openings, but the posts supporting the header must extend to the floor. The bottom plate of the header must extend to the outside of the post.

ISOMETRIC

Scale: NTS

Updated 1-16-12

R-Control® SIP

TITLE:
Headers

NO.
SIP-112